

DG834N

telnet is disabled by default.

you can enable it by typing <http://routerip/setup.cgi?todo=debug>

this enables telnet until you reboot the router. there is no password-protection on the telnet-access. everyone can access it from the lan.